





9) Then, on Main screen click on Service menu

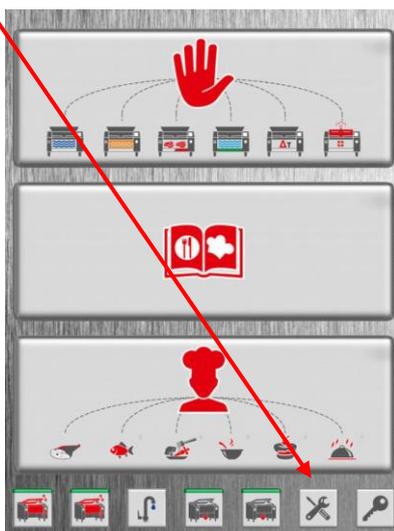


10) In service menu click on USB



11) In USB menu switch arrow from USB to Machine

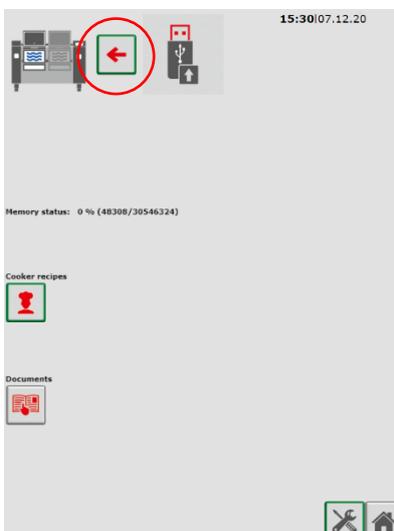

12) Plug USB stick into the machine, choose Cooker recipes and press START

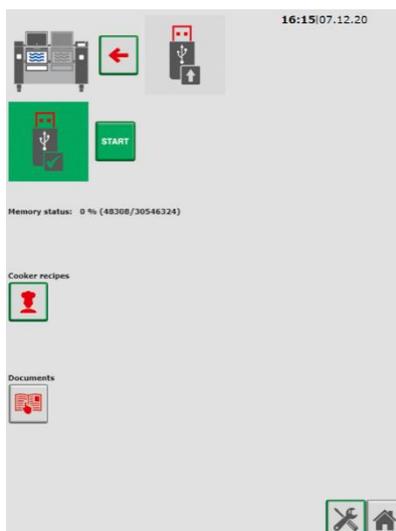

13) After uploading you will see OK next to Cooker recipes

