

iipa ROUTE[®]

First, What We need before opening account „JIPA ROUTE“

Username
Password
Name and surname
Company
Telephone
E-mail
Country
City
Street

And send to: bosak@jipainternational.cz

After just go to

https://jiparoute.tecomat.com/TR_LOGIN.XML

1) Here you write your Username and password

TecoRoute - Login

jiparoute.tecomat.com/TR_LOGIN.XML

Vítejte a přihlašte se, prosím.

TecoRoute

Uživatelské jméno

Heslo

PLC jméno

Vytvořit odkaz pro trvalé přihlášení

Zrušit odkaz pro trvalé přihlášení

Login

2) Select here the unit.

TecoRoute - Select PLC

jiparoute.tecomat.com/TR_SELECT.XML

Vyberte PLC, prosím.


TecoRoute

PLC jméno:


- Pan31_FBDC7A1F7F2B : JIPA International Pra

Select


3) Here you click only on Login

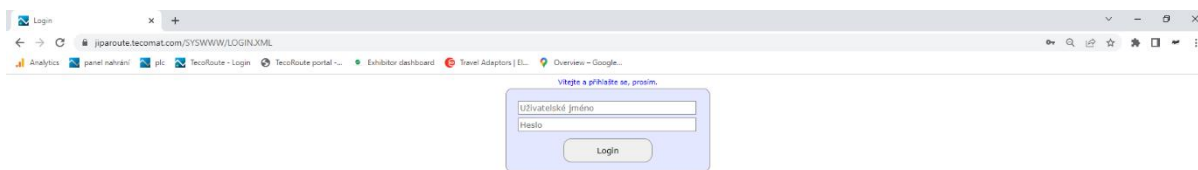


4) Then, You will see what happens on the machine

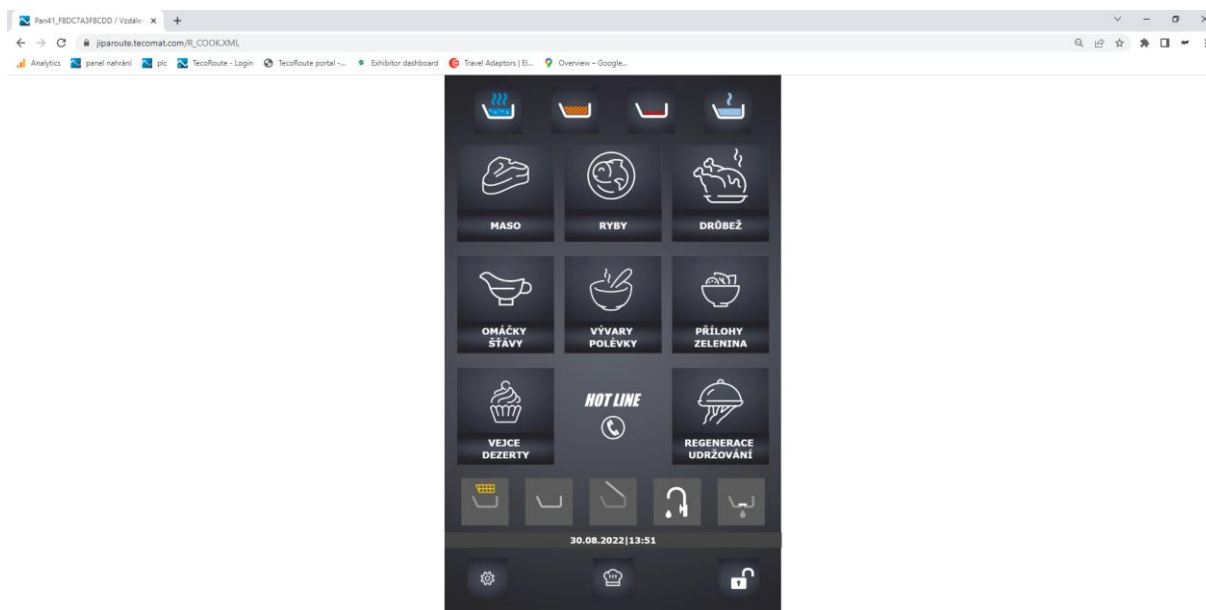

5) When you click on picture, You will see the service page

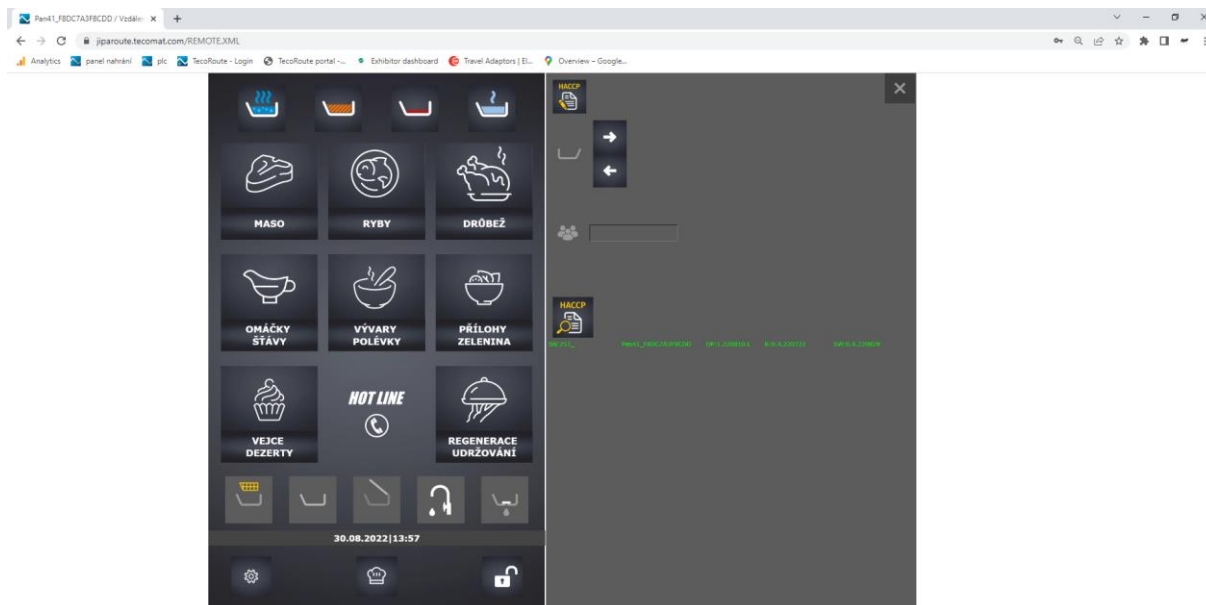

6) The password for service access is **Service**

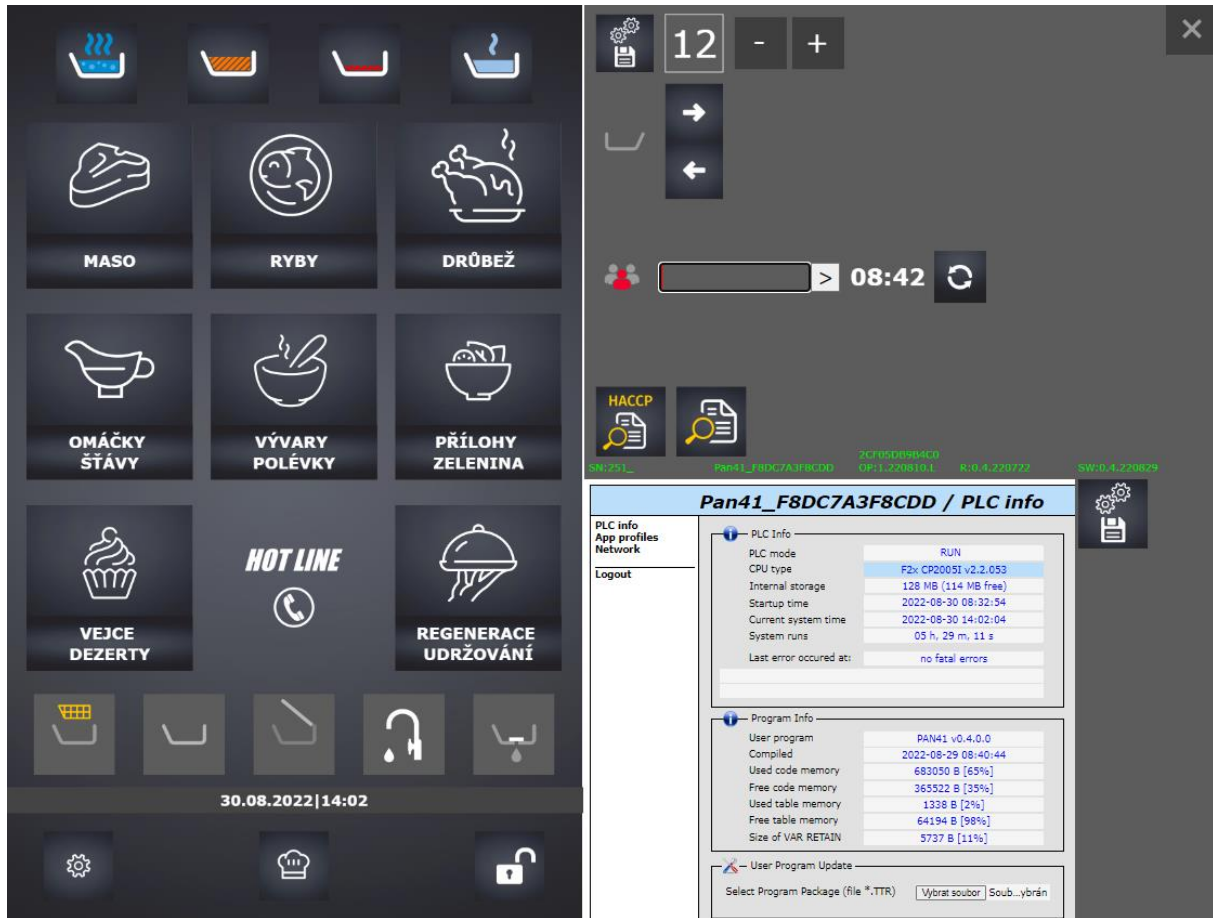

The screenshot displays the JIPA service access interface. On the left is a menu with various food categories represented by icons: MASO (Meat), RYBY (Fish), DRŮBEŽ (Poultry), OMÁČKY ŠTÁVY (Sauces), VÝVARY POLÉVKY (Soups), PŘÍLOHY ZELENINA (Side Dishes), VEJCE DEZERTY (Eggs Desserts), HOT LINE, and REGENERACE UDRŽOVÁNÍ (Maintenance/Regeneration). At the bottom of the menu, the date and time are shown as 30.08.2022 | 14:02.

On the right, a service access window is open, showing a temperature display of 12, navigation arrows, a time display of 08:42, and a HACCP icon. Below this, the PLC information window is displayed for the unit **Pan41_F8DC7A3F8CDD / PLC info**. The window contains the following data:

PLC Info	
PLC mode	RUN
CPU type	F2x CP20051 v2.2.053
Internal storage	128 MB (114 MB free)
Startup time	2022-08-30 08:32:54
Current system time	2022-08-30 14:02:04
System runs	05 h, 29 m, 11 s
Last error occurred at:	no fatal errors

Program Info	
User program	PAN41 v0.4.0.0
Compiled	2022-08-29 08:40:44
Used code memory	683050 B [65%]
Free code memory	365522 B [35%]
Used table memory	1338 B [2%]
Free table memory	64194 B [98%]
Size of VAR RETAIN	5737 B [11%]

At the bottom of the PLC info window, there is a section for "User Program Update" with a "Select Program Package (file *.TTR)" button and a "Vybrat soubor" (Select file) button.