


Software update via USB drive


- 1) Always take a picture of the values in the service menu parameters 1 and parameters 2!! (Password to service level 2 Where you can find parameters 2 is 4567)
- 2) From the main menu You have to go to the **SERVIS** page

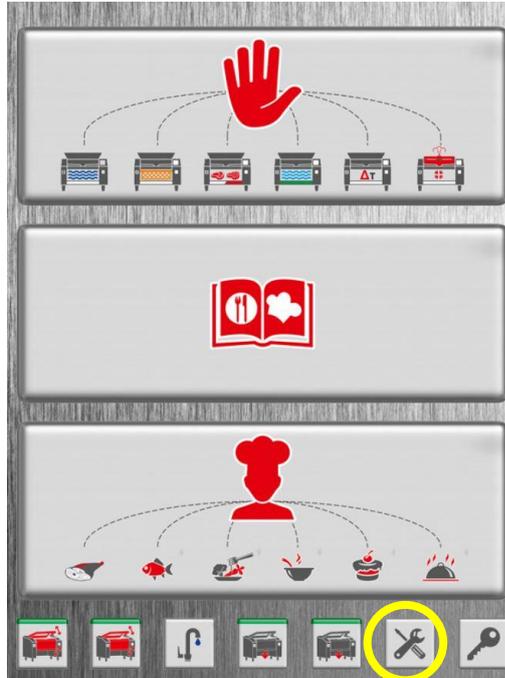

- 3) On the **SERVIS** page, You select the **USB** icon at the **bottom**




- 4) Turn the arrow from **the USB drive** to **the MACHINE** and turn on the labels

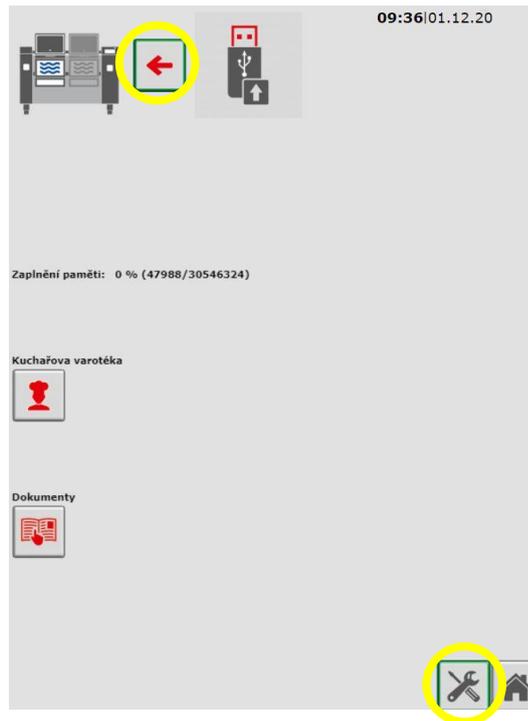


5) The Teco\Update folder must be created on the USB drive\"**Here we insert new Software according to the type of pan**"

6) Insert a USB drive with the new Software uploaded into the machine

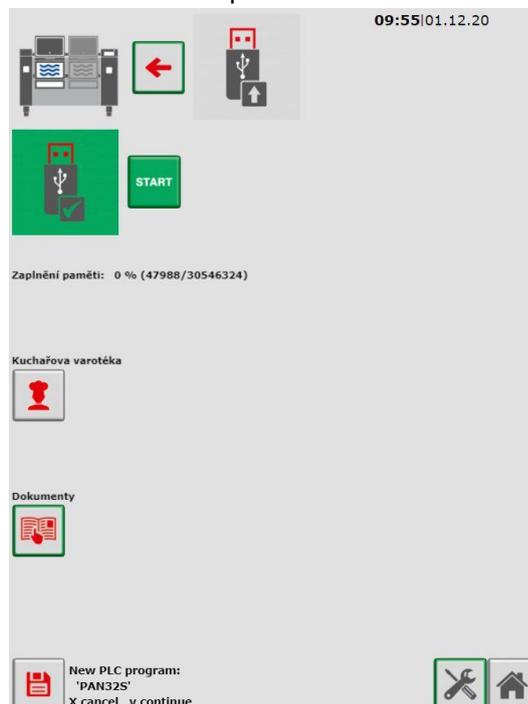

- 7) In the lower left corner, You will see the **symbol SAVE**, so You hold it and confirm **with the tick symbol**

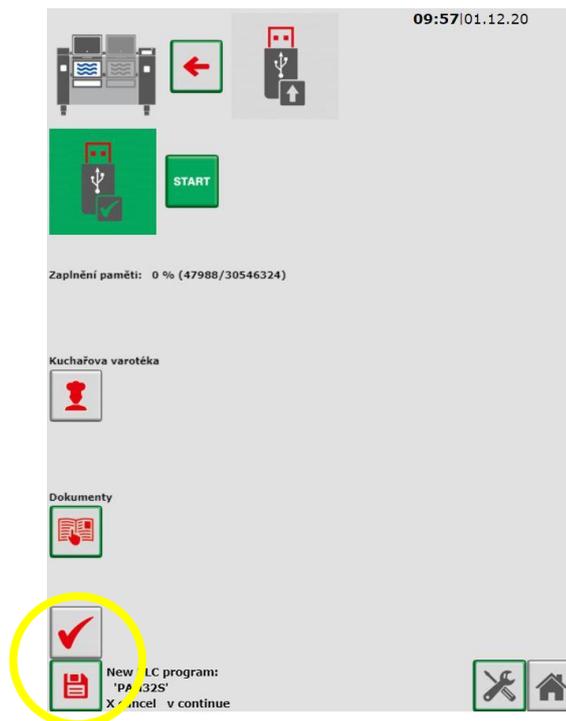

- 8) The machine update itself

